


CairnsHELMETS®

INSTALLATION AND USER INSTRUCTIONS: S550P AND S552P CAIRNS/ESS GOGGLES

INSTALLATION INSTRUCTIONS

1. If the helmet contains a faceshield, remove the faceshield and faceshield hardware by removing the four (4) screws from the underside of the brim.
2. Attach the strap clip, as shown, at the same locations as the faceshield hardware. Use either the four (4) screws provided with the Goggle Kit or the four (4) original screws to attach the strap clips to the brim of the helmet shell.

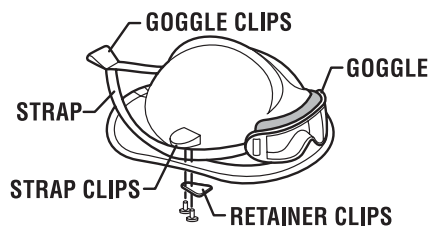

⚠ WARNING

For helmet models 660C, 664, 1000, 1010, and 1044 reinstall the plastic retainer clips, as shown. Failure to follow this warning can result in serious personal injury or death.

3. Snap the brimlock clip over the helmet hanger (at the edge of the rear brim), with the strap positioned on the top side of the rear brim. The helmet hanger D-ring will protrude through the center of the brimlock clip.
4. Stretch the goggles and strap over the front of the helmet and position the straps under the strap clips.
5. Install the mounting kit as shown.

GOGGLE CARE

1. Inspect the goggles before and after each use. If damage is found, replace the damaged component(s) with replacement parts or the entire goggle assembly (P/N S550P and P/N S552P) immediately.
2. To clean the goggles, remove the lens from the goggle and clean separately. The goggles frame and strap may be gently hand-washed in a mild, soapy solution, rinsed, and air-dried. Refer to Lens Care for cleaning of the goggle lens.
3. To maintain the elasticity of the straps, loosen the straps while storing the helmet and goggles.
4. Store the goggles in a cool, dry place away from sunlight.

GOGGLES REPLACEMENT PARTS

P/N S550P Cairns/ESS Goggle Assembly with Strap Clips
P/N S556P Cairns/ESS Replacement Goggle Lens
P/N S952P Strap Clip Replacement Kit for model numbers 660C and 664
P/N S953P Strap Clip Replacement Kit for model numbers 360S, 1000, 1010, 1044, N5A, and N6A

LENS CARE

1. Polycarbonate lenses require special care. Clean only with water, mild soap, and a soft cotton cloth.

⚠ CAUTION

Never use cleaners or solvents as these may weaken the lens and can result in lens cracking or breakage. Use a soft cotton cloth to gently wipe clean. Never use paper products to clean lenses.

LENS INSTALLATION

1. Lenses are easily installed by starting at one side and moving along the bottom and around to the top, firmly snapping the replacement lens (P/N S556P) into the goggle frame posts.
2. Ensure that all posts are completely pushed into the lens holes.

For More Information, call 1-800-MSA-2222 or Visit Our Website at www.MSAafety.com



MINE SAFETY APPLIANCES COMPANY
CRANBERRY TWP., PENNSYLVANIA, U.S.A. 16066