

# EMERGENCY EQUIPMENT

VOLUME  
04



**SPEAKMAN®**

# SPEAKMAN COMPANY

WILMINGTON, DELAWARE

ONLY TWO TO A PERSON



*PROTECT YOURS!*

2 GOOD REASONS FOR USING  
THE SPEAKMAN A-E-R-A-T-E-D  
EYE WASH FIXTURE

167

HAND OPERATED  
PULL HERE

FOOT OPERATED  
PANIC BAR  
PUSH HERE

*WIN AN YSTREAM  
SHOWER HEAD*

24 will be given away  
FREE here on October 25.

JUST FILL IN YOUR  
REGISTRATION CARD  
AND DEPOSIT HERE  
DO IT NOW!



SPEAKMAN  
LIFE-SAVING  
EMERGENCY

# PERFORMANCE ELEVATED

A book of superior quality, thoughtful innovation, and unrivaled performance. These fixtures exist to make your workplace safer and compliant.



1. Optimus, pg. 5 | 2. Eyesaver, pg. 9 | 3. Lifesaver Shower Head, pg. 14 | 4. Laboratory, pg. 16  
5. Traditional Equipment, pg. 22 | 6. Portable Equipment, pg. 28 | 7. Tepad Water Solutions, pg. 32  
8. Alarms and Signs, pg. 38 | 9. Compliance Standards, pg. 42

*Speakman products have been third-party certified to meet nationally recognized standards by these organizations:*



# EQUIPMENT BADGES

Look for these icons throughout this book to help identify product features.



**Aerated Sprays:** Item features aerated spray heads for a comfortable, soothing experience.



**Soft Flow Sprays:** Item features soft yet full sprays for a comfortable experience.



**ANSI/ISEA Z358.1 Certified:** Indicates that the eyewash, facewash or emergency shower is certified to ANSI/ISEA Z358.1 standards.



**Tepid Water Ready:** Identifies that the product is compatible with our tepid water valve.



**ADA Compliant:** Unit can be installed at a height that meets ADA requirements.



**Low-Lead Brass Construction:** The product is certified to meet the NSF 372 Safe Drinking Water Act and NSF 61 Drinking Water System Components - Health Effects.



## 1. OPTIMUS®

---

# IT'S MORE THAN MEETS THE EYE


When we began designing Optimus, our mission was to create a product that would provide the ultimate solution for your workplace.

Featuring both an eyewash and facewash combined into one cohesive design - Optimus delivers complete coverage in the event of a chemical burn. With the ability to be wall-mounted, pedestal-mounted or combined with an emergency shower - Optimus is perfect for nearly any worksite. Plus, Optimus can be quickly configured to meet ADA specifications and is also 100% ANSI/ISEA Z358.1 Certified.

This is Optimus. Transform your workplace.

## AN EASY CHOICE

Selecting the perfect emergency equipment can be such a complicated process. With endless options, customizations, and respect to your worksite's specifications - the world of emergency equipment can become remarkably confusing. With Optimus, we wanted to simplify that. By combining an eyewash, facewash, and the compatibility of an emergency shower into one cohesive unit, we were able to create an all-in-one solution that eliminates the stress of choosing between which feature is perfect for your establishment

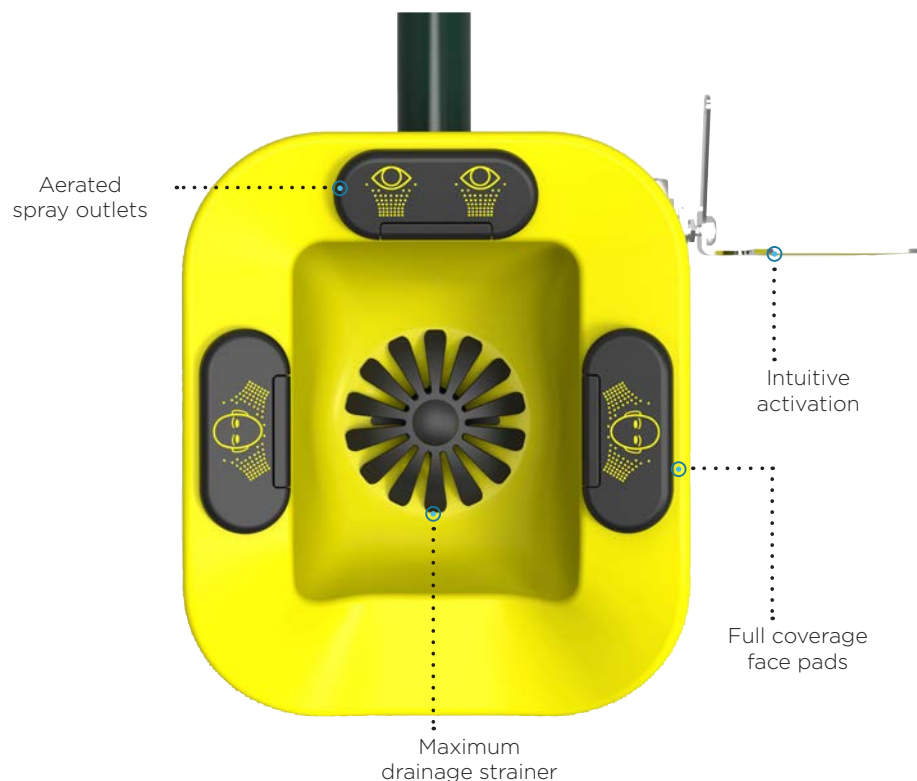

## OPTIMUS® WALL-MOUNTED

Patented, wall-mounted eye and facewash. Featuring a highly visible, yellow plastic or corrosion-resistant stainless steel bowl.

- Aerated eyewash sprays
- Flip-top dust caps
- Push handle activator
- Integral in-line strainer
- Stay-open ball valve
- 4.9 GPM at 30 psi.

PRODUCT	DESCRIPTION
SE-1000	Plastic bowl
SE-1050	Stainless steel bowl
SE-1055	All stainless steel

OPTIONS	DESCRIPTION
FPV	Freeze protection valve
HFO	Hand/Foot operation
HS	Hand-held spray
ILS	In-line strainer
OCV	Optimus bowl cover
PT	P-Trap
SPV	Scald protection valve
STW	Thermostatic mixing valve



[Tepid Water Solutions pg. 47](#)

## OPTIMUS® BOWL COVER

The Optimus Bowl Cover is designed to connect to any existing Optimus bowl to protect it from being filled with unwanted debris.

- Provides complete protection of spray heads
- Prevents airborne dust and dirt from accumulating
- Transparent cover allows you to easily inspect the product
- Incredibly strong construction provides stainless steel-like tenacity
- Features a quick-release hinge for easy service and maintenance

PRODUCT	DESCRIPTION
OCV	Optimus bowl cover



## OPTIMUS® PEDESTAL-MOUNTED

Patented, pedestal-mounted eye and facewash. Featuring a highly visible, yellow plastic or corrosion-resistant stainless steel bowl.

- Aerated eyewash sprays
- Flip-top dust caps
- Push handle activator
- Integral in-line strainer
- Stay-open ball valve
- DuraJade powder-coated galvanized steel pedestal
- 4.9 GPM at 30 psi.



### PRODUCT DESCRIPTION

PRODUCT	DESCRIPTION
SE-1100	Plastic bowl
SE-1150	Stainless steel bowl
SE-1155	All stainless steel

### OPTIONS DESCRIPTION

OPTIONS	DESCRIPTION
FPV	Freeze protection valve
HFO	Hand/Foot operation
HS	Hand-held spray
ILS	In-line strainer
OCV	Optimus bowl cover
PT	P-Trap
SPV	Scald protection valve

[Tepid Water Solutions pg. 47](#)



## OPTIMUS® COMBINATION

Patented Optimus bowl combined with an emergency shower. Includes all necessary components to be ADA configurable.

- Aerated eyewash sprays
- Flip-top dust caps
- Push handle activator
- 4.9 GPM at 30 psi eye and facewash
- Integral in-line strainer
- Stay-open ball valve
- High performing emergency shower
- 20 GPM at 30 psi emergency shower



### PRODUCT DESCRIPTION

PRODUCT	DESCRIPTION
SE-1200	Plastic bowl
SE-1250	Stainless steel bowl
SE-1255	All stainless steel

### OPTIONS DESCRIPTION

OPTIONS	DESCRIPTION
FPV	Freeze protection valve
HFO	Hand/Foot operation
HS	Hand-held spray
ILS	In-line strainer
OCV	Optimus bowl cover
PT	P-Trap
SPV	Scald protection valve

[Tepid Water Solutions pg. 47](#)





# YOUR EYES DESERVE BETTER

Your eyes are pretty important, they detect light, they focus on objects and even help make sense of your surrounding environments.


But each day, lab techs, professors and even students put their eyes at risk when they handle hazardous materials. There's nothing we can do to prevent accidents - but our job is to create the best equipment imaginable to ensure you're adequately prepared for when accidents occur.

Our Eyesaver family has been specially designed with your eyes in mind. Whether it's in the laboratory or at the office - Eyesaver is prepared to do precisely what its name intends.

## NEVER DESIGN A LAB WITHOUT IT

We're continually evaluating workspaces and basing our products around them. When we studied laboratories, we discovered that most emergency equipment was either hard to locate or not up to standard. With Eyesaver, our goal was to create the ultimate solution for the lab. Featuring a fully-functional eyewash paired with an independently operated faucet, Eyesaver preserves valuable counter space and provides an intuitive location during an emergency. Plus with two independent water supplies built within its frame - Eyesaver consistently delivers safe, tepid water to the eyes.

EYESAVER®  
SEF-1850

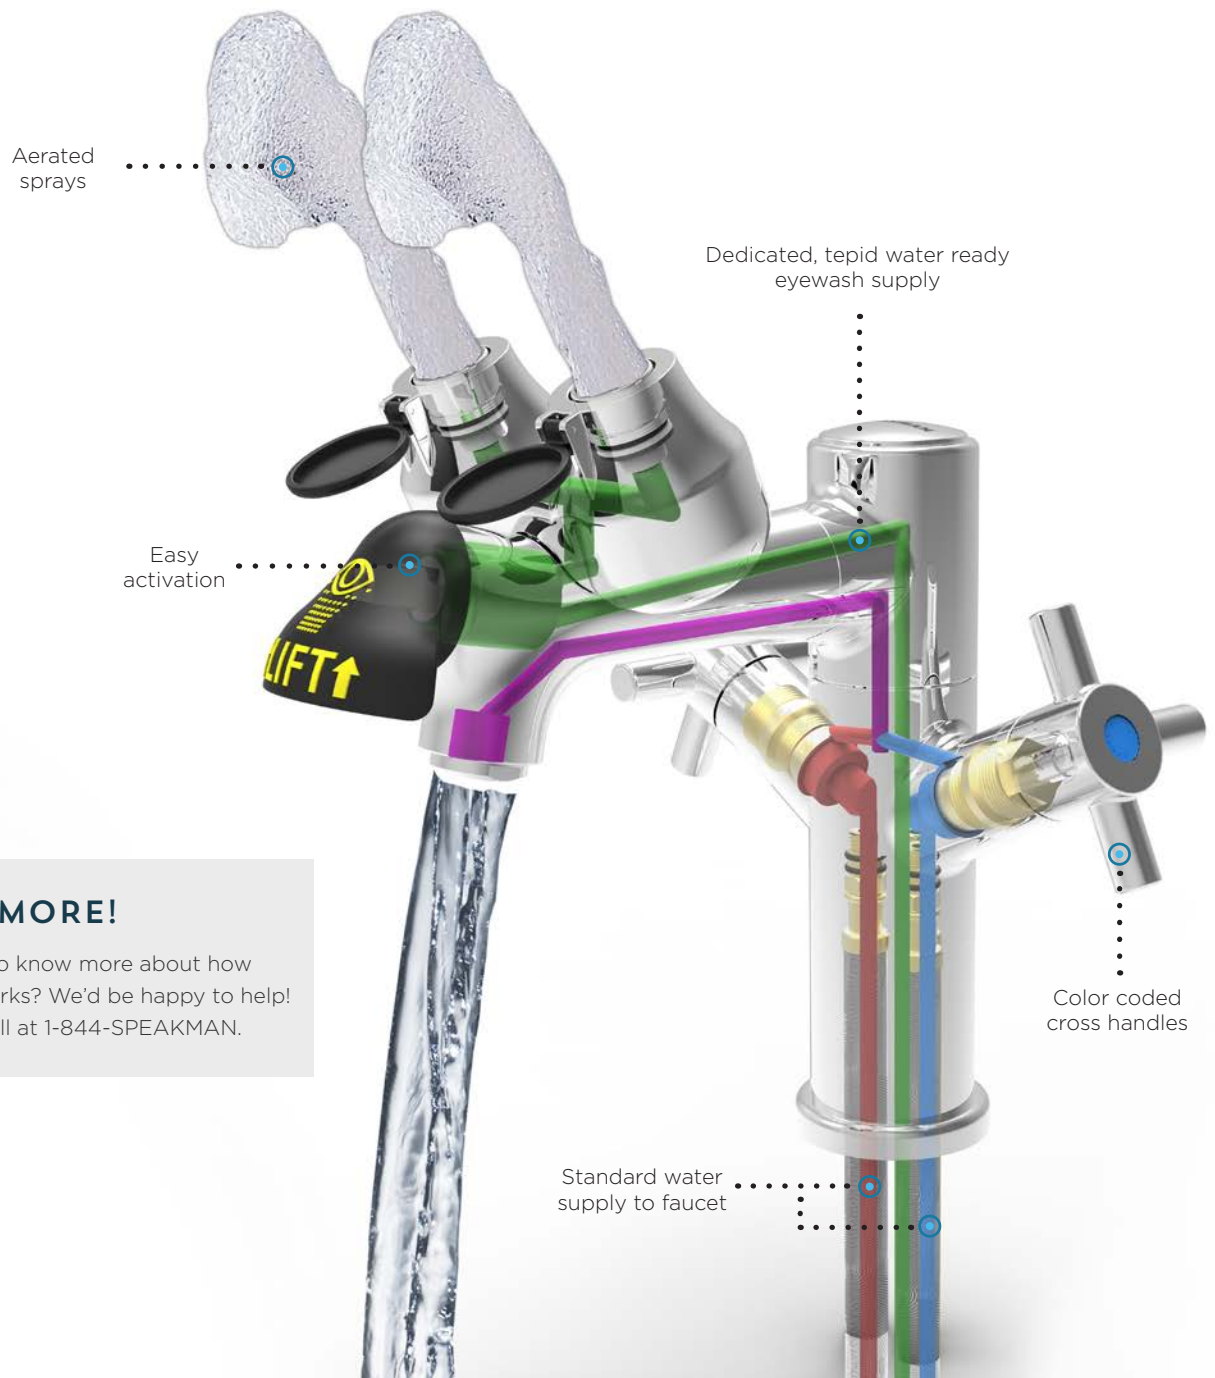

### TELL ME MORE!

Would you like to know more about how our Eyesaver works? We'd be happy to help! Just give us a call at 1-844-SPEAKMAN.

# EYESAVER® EYEWASH & FAUCET

## EYESAVER® SEF-1850

- Patented single post design
- Swivel or rigid spout
- Lift handle activator
- Meets ASME A112.18.1/CSA B125.1, NSF 61, NSF 372
- 1.5 GPM faucet flow rate
- ANSI/ISEA Z358.1 Certified
- 2.14 GPM eyewash at 30 PSI

### OPTIONS DESCRIPTION

4WH	4 in. wrist blade handles
BO	0.5 GPM vandal-resistant flow control outlet
LF	1.5 GPM laminar flow for faucet outlet
NA	Non-aerated soft flow eyewash spray outlets
ST	Serrated tip with vacuum breaker
TW	Thermostatic mixing valve
8	8-inch single post design



4WH



## EYESAVER® CLASSIC SEF-1800

- Patented design
- Meets ASME A112.18.1/CSA B125.1, NSF 61, NSF 372
- Lift handle activator
- ANSI/ISEA Z358.1 Certified
- Swivel or rigid spout
- 2.0 GPM eyewash at 30 PSI
- 1.2 GPM faucet flow rate

### PRODUCT # DESCRIPTION

SEF-1800	Widespread Faucet + Eyewash
SEF-1800-8	8-inch Spout Widespread Faucet + Eyewash
SEF-1800-SL	Single Lever Faucet + Eyewash

### OPTIONS DESCRIPTION

8	8-inch spout
BO	0.5 GPM vandal-resistant flow control outlet
FP	Foot pedal activation
LF	1.5 GPM laminar flow for faucet outlet
NA	Non-aerated soft flow eyewash spray outlets
SL	Two hole single lever faucet
ST	Serrated tip with vacuum breaker
TW	Thermostatic mixing valve



SEF-1800-SL



## EYESAVER® CLASSIC SEF-1000

- Patented design
- Meets ASME A112.18.1/CSA B125.1, NSF 61, NSF 372
- Lift handle activator
- ANSI/ISEA Z358.1 Certified
- Swivel or rigid spout
- 2.0 GPM eyewash at 30 PSI
- 1.2 GPM faucet flow rate

### PRODUCT # DESCRIPTION

SEF-1000	Retrofit Faucet Spout + Eyewash
SEF-1000-8	Retrofit 8-inch Faucet Spout + Eyewash

### OPTIONS DESCRIPTION

8	8-inch spout
BO	0.5 GPM vandal-resistant flow control outlet
FP	Foot pedal activation
LF	1.5 GPM laminar flow for faucet outlet
NA	Non-aerated soft flow eyewash spray outlets
ST	Serrated tip with vacuum breaker
TW	Thermostatic mixing valve



# EYESAVER® EYEWASH & FAUCET

## EYESAVER® SENSORFLO®

The patented Eyesaver SensorFlo is equipped with dual spray heads, independent water supplies, a fully functional faucet.

PRODUCT #	DESCRIPTION
SEF-18100	Battery Sensor Faucet + Eyewash
SEF-18100-8	Battery Sensor 8" Faucet + Eyewash
SEF-18100-8-TMV	Battery Sensor 8" Faucet + Eyewash w/ Thermostatic Mixing Valve
SEF-18100-TMV	Battery Sensor Faucet + Eyewash w/ Thermostatic Mixing Valve
SEF-18102	Battery Sensor Faucet + Eyewash w/ Above Counter Mixer
SEF-18102-8	Battery Sensor 8" Faucet + Eyewash w/ Above Counter Mixer
SEF-18107	Battery Sensor Faucet + Eyewash w/ Manual Override
SEF-18107-8	Battery Sensor 8" Faucet + Eyewash w/ Manual Override
SEF-18107-TMV	Battery Sensor Faucet + Eyewash w/ Manual Override & TMV
SEF-18107-8-TMV	Battery Sensor 8" Faucet + Eyewash w/ Manual Override & TMV

OPTIONS	DESCRIPTION
8	8 in. deep gooseneck rigid or swivel
BO	0.5 GPM vandal-resistant flow control outlet
LF	2.2 GPM laminar flow for faucet outlet
NA	Soft flow eyewash spray outlets
ST	Serrated tip with vacuum breaker
TW	Thermostatic mixing valve



SEF-18100



## EYESAVER® SENSORFLO®

The patented Eyesaver SensorFlo is equipped with dual spray heads, independent water supplies, a fully functional faucet.

PRODUCT #	DESCRIPTION
SEF-18200	AC Sensor Faucet + Eyewash
SEF-18200-8	AC Sensor 8" Faucet + Eyewash
SEF-18200-8-TMV	AC Sensor 8" Faucet + Eyewash w/ Thermostatic Mixing Valve
SEF-18200-TMV	AC Sensor Faucet + Eyewash w/ Thermostatic Mixing Valve
SEF-18202	AC Sensor Faucet + Eyewash w/ Above Counter Mixer
SEF-18202-8	AC Sensor 8" Faucet + Eyewash w/ Above Counter Mixer
SEF-18207	AC Sensor Faucet + Eyewash w/ Manual Override
SEF-18207-8	AC Sensor 8" Faucet + Eyewash w/ Manual Override
SEF-18207-8-TMV	AC Sensor 8" Faucet + Eyewash w/ Manual Override & TMV
SEF-18207-TMV	AC Sensor Faucet + Eyewash w/ Manual Override & TMV

OPTIONS	DESCRIPTION
8	8 in. deep gooseneck rigid or swivel
BO	0.5 GPM vandal-resistant flow control outlet
LF	2.2 GPM laminar flow for faucet outlet
NA	Soft flow eyewash spray outlets
ST	Serrated tip with vacuum breaker
TW	Thermostatic mixing valve



SEF-18200



# EYESAVER® EYEWASH & FAUCET

## EYESAVER® SEF-9000

Sleek, patented design features a service sink faucet, dual spray heads and requires only one water source for operation.

- Dual spray heads
- Squeeze handle activation with stay-open valve
- Vandal-resistant handles
- Brass construction
- ANSI/ISEA Z358.1 Certified

OPTIONS	DESCRIPTION
4WH	4 in. wrist blade handles for service sink faucet
5H	5 ft. hose with hook
CK	Check valves in swivel assembly
FM	Fixed mount
TW	Thermostatic mixing valve



## EYESAVER® SEF-9200

Sleek, patented design features drench hose attachment that attaches directly to SC-5811 Service Sink Faucet. Compatible with models: SC-581X/583X/585X, Ferguson ProFlo PF1118, Fiat 830-AA.

- Dual spray heads
- Squeeze handle activation with stay-open valve
- Included stainless steel hose
- ANSI/ISEA Z358.1 Certified

OPTIONS	DESCRIPTION
TW	Thermostatic mixing valve
ILR	Retrofit eyewash for utility sinks
FM	For wall mount eyewash only (vacuum breaker not required)



# SHOWERING SINCE DAY 1

For a century and a half, we've been known for our shower heads. Installed in homes, hotels and fine commercial establishments throughout the globe - our shower heads have a legendary reputation for delivering the greatest experience imaginable.

Needless to say, we know a thing or two about showering. So we decided to apply the same level of engineering to our emergency shower head.

Meet Lifesaver. Now featured on all our emergency combinations, Lifesaver is the most advanced emergency shower head we've ever designed. Featuring a powerful, yet comfortable spray, reimagined technology, and a new spray engine - Lifesaver will deliver a superior performance when you need it most.

## A SUPERIOR SHOWER, INSIDE & OUT

Lifesaver elevates emergency shower heads to an entirely new level. In addition to a robust, comfortable spray performance - we developed a self-draining system that ensures water will never collect and freeze. We engineered a 20 GPM flow control that perfectly balances pressure between the shower and the eyewash. And Lifesaver is even able to retrofit any existing emergency shower system, making it exceptionally versatile.



# LIFESAVER® SHOWER HEAD

## LIFESAVER® SE-810

Lifesaver Emergency Shower Head features a plastic spray engine and shell. Equipped with a 20 GPM flow control and features a self-draining system.

- Plastic spray engine & shell
- Disperses water evenly
- Retrofits existing emergency showers
- Drains water completely after use



## LIFESAVER® SE-820

Lifesaver Emergency Shower Head features a plastic spray engine and stainless steel shell. Equipped with a 20 GPM flow control and features a self-draining system.

- Plastic spray engine
- Stainless steel shell
- Disperses water evenly
- Retrofits existing emergency showers
- Drains water completely after use



## LIFESAVER® SE-830

Lifesaver Emergency Shower Head features a plastic spray engine and stainless steel shell. Equipped with a 20 GPM flow control and features a self-draining system.

- Plastic spray engine
- Stainless steel shell
- Disperses water evenly
- Retrofits existing emergency showers
- Drains water completely after use





# INSPIRED BY SCIENCE

At Speakman, we've always had a profound appreciation for the power of science. And we believe we can help advance its potential by designing cleaner, clutter-free environments to experiment in.

With our Eyesaver family, we were able to improve the laboratory workspace. With our laboratory equipment, we've extended our solutions to the entire room.

Featuring a unique assortment of eyewashes, showers, and emergency stations - we can build a modern, ANSI/ISEA Z358.1 compliant lab that is more effective in every conceivable way.

# LABORATORY EYEWASHES

## LABORATORY EYEWASH SE-570

Swing-activated eyewash features dual aerated spray heads, flip-top dust covers and a built-in flow regulator with stay-open valve.

- Countertop-mounted
- 3.06 GPM at 30 psi
- ¼ turn ceramic valve
- Swing activated
- Integral flow control
- ½ in. NPT female inlet

OPTIONS	DESCRIPTION
LH	Left hand operation
ILS	In-line strainer



## LABORATORY EYEWASH SE-572

Countertop-mounted, paddle-handle-activated eyewash with 90-degree swivel arm.

- Countertop-mounted
- 3.06 GPM at 30 psi
- Stainless steel push handle
- Integral flow control
- Brass, chrome-plated valve
- ½ in. NPT female inlet

OPTIONS	DESCRIPTION
LH	Left hand operation
ILS	In-line strainer



## LABORATORY EYEWASH

Swing-activated eyewash featuring Optimus aerated sprayheads with protective dust caps.

- Brass valve
- 3.9 GPM at 30 psi
- Swing activated
- Integral flow control
- ½ in. NPT female inlet

PRODUCT #	DESCRIPTION
SE-573	Deck-mounted eyewash with 16" arm
SE-573-SD	Deck-mounted eyewash with 10" arm
SE-577-SD	Wall-mounted eyewash with 10" arm
SE-577-SD-ADA	Wall-mounted eyewash with 16" arm

OPTIONS	DESCRIPTION
ILS	In-line strainer



SE-573-SD



SE-577-SD



## LABORATORY EYEWASHES

### LABORATORY EYE/FACEWASH SE-575

Wall-mounted, push-handle activated eye/facewash with comfortable, soft sprays.

- Wall-mounted
- Stainless steel push handle
- 4.5 GPM at 30 psi
- Brass, chrome-plated valve
- Integral flow control
- ½ in. NPT female inlet



## LABORATORY EYEWASHES & SHOWERS

### LABORATORY SHOWER

Horizontal supply, concealed ceiling-mounted emergency shower. Includes stay-open ball valve and highly visible yellow pull rod activator.

- High-performance shower head
- 20 GPM at 30 psi
- Internal flow control
- 1 in. IPS galvanized steel pipe
- Stay-open valve

#### PRODUCT DESCRIPTION

PRODUCT	DESCRIPTION
SE-236-PR	Pull rod
SE-236	On/off pull chain

#### OPTIONS DESCRIPTION

OPTIONS	DESCRIPTION
FPV	Freeze protection valve
SPV	Scald protection valve
SSBV1	Substituting a 1 in. IPS stainless steel ball valve



SE-236-PR



### WALL-MOUNTED LABORATORY SHOWER

Drench shower with either 10-inch flush or drop-down chrome-plated shower head. Features semi-recessed, wall-mounted activator.

- High-performance shower head
- Stainless steel cabinet
- Stay-open valve with pull-down activator

#### PRODUCT DESCRIPTION

PRODUCT	DESCRIPTION
SE-237	Flush mount shower head
SE-238	Drop-down shower head

#### OPTIONS DESCRIPTION

OPTIONS	DESCRIPTION
FPV	Freeze protection valve
SPV	Scald protection valve
SSBV1	Substituting a 1 in. IPS stainless steel ball valve



SE-237



SE-238



# LABORATORY EYEWASHES & SHOWERS

## LABORATORY EYEWASH

Recessed stainless steel wall-mounted cabinet with swing-down activated eyewash and integral drain pan.

- Dual spray heads
- 3.9 GPM at 30 psi
- Brass, chrome-plated valve
- Stainless steel cabinet

PRODUCT	DESCRIPTION
---------	-------------

SE-575-DP	Laboratory eyewash
-----------	--------------------



## WALL-MOUNTED LABORATORY COMBINATION

Combination drench shower with wall-mounted, swing-down activated eyewash with integral drain pan. Additionally features recessed or drop-down drench shower.

- High-performance shower head
- Wall activated eyewash
- 3.9 GPM eyewash at 30 psi
- 20 GPM shower at 30 psi

PRODUCT	DESCRIPTION
---------	-------------

SE-575-DP-237	Flush mount shower head
---------------	-------------------------

SE-575-DP-238	Drop-down shower head
---------------	-----------------------



SE-575-DP-237



SE-575-DP-238



## COUNTERTOP-MOUNTED EYEWASH & DRENCH HOSE

Featuring a countertop-mounted design, this eyewash and drench hose is perfect for flushing any affected area in the event of chemical exposure. The included 6-foot long hose is concealed below the counter.

- Dual aerated spray head
- Countertop-mounted
- Stay-open valve
- 6-foot long hose
- 2.69 GPM at 30 psi
- ANSI/ISEA Z358.1 Certified

PRODUCT	DESCRIPTION
---------	-------------

SE-927	Eyewash & drench hose
--------	-----------------------

OPTIONS	DESCRIPTION
---------	-------------

VB	Vacuum breaker
----	----------------



## WALL-MOUNTED EYEWASH & DRENCH HOSE

The Eyesaver Eyewash & Drench Hose features a wall-mounted installation attached to an extended bracket for simple and secure accessibility. Available in a dual or single spray head option. Includes a 12-foot recoiling hose for flexibility.

- Dual spray heads
- Wall-mounted
- 12-foot long recoiling hose
- 2.12 GPM at 30 psi
- ANSI/ISEA Z358.1 Certified

PRODUCT	DESCRIPTION
SE-925	Single spray head
SE-925-TEW	Dual spray head eyewash

OPTIONS	DESCRIPTION
VB	Vacuum breaker



SE-925-TEW



## WALL-MOUNTED DRENCH HOSE

The Eyesaver Drench Hose features a wall-mounted installation and a single aerated spray head for eye, face or body flushing. Includes a 6-foot reinforced hose for flexibility.

- Single spray head
- Wall-mounted
- 6-foot long hose
- 1.5 GPM at 30 psi

PRODUCT	DESCRIPTION
SE-920	Drench hose

OPTIONS	DESCRIPTION
VB	Vacuum breaker



## COUNTERTOP-MOUNTED DRENCH HOSE

Featuring a countertop-mounted design, this drench hose can be installed in intuitive locations that are easily accessible. The included 6-foot long hose is concealed below the counter.

- Single spray head
- Countertop-mounted
- Self-closing valve
- 6-foot long hose
- 1.5 GPM at 30 psi

PRODUCT	DESCRIPTION
SE-921	Drench hose

OPTIONS	DESCRIPTION
VB	Vacuum breaker



## 5. TRADITIONAL EQUIPMENT

---

# UNAPOLOGETIC SIMPLICITY

No bells and whistles. No fancy technology. Just modest, hard-working products that are engineered to perform, period.

That's the best way to describe our Traditional Emergency Equipment. The backbone of our emergency line, these fixtures have been designed to deliver comfortable, soothing aid the moment they're activated.


Because sometimes, the most significant innovation is providing function, reliability, and quality.

## TRADITIONAL COMBINATION STATIONS

---

### THE PERFECT COMBINATION

Safety should never compromise. But often times it does because selecting the perfect emergency equipment can become such a complicated experience. But not anymore. Our Traditional Combination Stations pair every item necessary to create a complete safety solution. Featuring our signature eyewashes merged with our powerful Lifesaver Shower Head - these fixtures take the guesswork out of selecting compliant equipment.

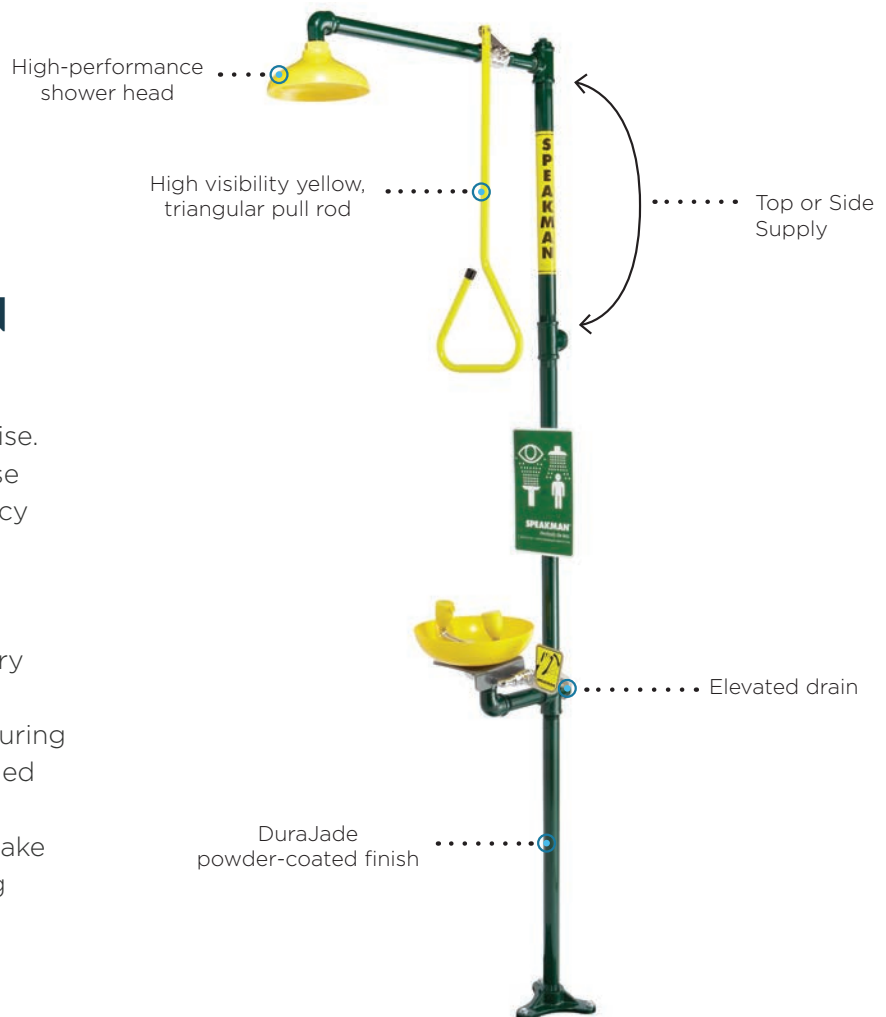

## TRADITIONAL EYE/FACEWASH

### TRADITIONAL EYE/FACEWASH

Wall-mounted eye/facewash with two, highly visible spray heads. Featuring a highly visible, yellow plastic or corrosion-resistant stainless steel bowl.

- Wall-mounted
- Stainless steel push activator
- 4.5 GPM at 30 psi
- ½ in. NPT female inlet

PRODUCT	DESCRIPTION
SE-490	Stainless steel bowl
SE-495	Plastic bowl

OPTIONS	DESCRIPTION
FPV	Freeze protection valve
HFO	Hand and foot operation
HS	Addition of the SE-920 hand-held drench hose to eyewashes
ILS	In-line strainer for ½ in. IPS piping
PT	“P” trap for eyewash or eye/facewash stations
SPV	Scald protection valve
SSBV2	Substituting a ½ in. IPS stainless steel ball valve
STW	Thermostatic mixing valve



[Tepid Water Solutions pg. 47](#)

### TRADITIONAL EYE/FACEWASH

Pedestal-mounted eye/facewash with two, highly visible spray heads. Featuring a highly visible, yellow plastic or corrosion-resistant stainless steel bowl.

- Pedestal-mounted
- DuraJade, galvanized steel pipe
- Stainless steel push activator
- 4.5 GPM at 30 psi

PRODUCT	DESCRIPTION
SE-491	Stainless steel bowl
SE-496	Plastic bowl

OPTIONS	DESCRIPTION
FPV	Freeze protection valve
HFO	Hand and foot operation
HS	Addition of the SE-920 hand-held drench hose to eyewashes
ILS	In-line strainer for ½ in. IPS piping
PT	“P” trap for eyewash or eye/facewash stations
SPV	Scald protection valve
SSBV2	Substituting a ½ in. IPS stainless steel ball valve



[Tepid Water Solutions pg. 47](#)

# TRADITIONAL EYEWASH

## TRADITIONAL EYEWASH

Wall-mounted eyewash with two, highly visible aerated spray heads. Featuring a highly visible, yellow plastic or corrosion-resistant stainless steel bowl.

- Wall-mounted
- 3.2 GPM at 30 psi
- Stainless steel push activator
- ½ in. NPT female inlet

PRODUCT	DESCRIPTION
SE-582	Stainless steel bowl
SE-580	Plastic bowl

OPTIONS	DESCRIPTION
FPV	Freeze protection valve
HFO	Hand and foot operation
HS	Addition of the SE-920 hand-held drench hose to eyewashes
ILS	In-line strainer for ½ in. IPS piping
PT	“P” trap for eyewash or eye/facewash stations
SPV	Scald protection valve
SSBV2	Substituting a ½ in. IPS stainless steel ball valve
STW	Thermostatic mixing valve



## TRADITIONAL EYEWASH

Pedestal-mounted eyewash with two, highly visible spray heads. Featuring a highly visible, yellow plastic or corrosion-resistant stainless steel bowl.

- Pedestal-mounted
- Stainless steel push activator
- DuraJade, galvanized steel pipe
- 3.2 GPM at 30 psi

PRODUCT	DESCRIPTION
SE-584	Stainless steel bowl
SE-583	Plastic bowl

OPTIONS	DESCRIPTION
FPV	Freeze protection valve
HFO	Hand and foot operation
HS	Addition of the SE-920 hand-held drench hose to eyewashes
ILS	In-line strainer for ½ in. IPS piping
PT	“P” trap for eyewash or eye/facewash stations
SPV	Scald protection valve
SSBV2	Substituting a ½ in. IPS stainless steel ball valve



## VERTICAL SHOWER

High-performing emergency shower station featuring a highly visible, yellow plastic construction with a stay-open ball valve to allow hands-free operation once activated.

- Vertical supply
- High-performance shower head
- 20 GPM at 30 psi
- Integral 20 GPM flow restrictor
- High visibility pull-rod activator
- DuraJade green, galvanized pipe

PRODUCT	DESCRIPTION
SE-220	Vertical shower

OPTIONS	DESCRIPTION
FPV	Freeze protection valve
SCSV	Self-closing valve with chain and ring
SPV	Scald protection valve
SSBV1	1 in. IPS stainless steel ball valve
SSH	Stainless steel shower head



## VERTICAL SHOWER

High-performing stainless steel emergency shower station with a stay-open ball valve to allow hands-free operation once activated.

- Overhead supply
- 8-inch stainless steel shower head
- 20 GPM at 30 psi
- Standard pull-rod activator
- Integral 20 GPM flow restrictor

PRODUCT	DESCRIPTION
SE-220-SS	Vertical shower

OPTIONS	DESCRIPTION
FPV	Freeze protection valve
SPV	Scald protection valve



## HORIZONTAL SHOWER

High-performing emergency shower station featuring a highly visible, yellow plastic construction with a stay-open ball valve to allow hands-free operation once activated.

- Horizontal supply
- 20 GPM at 30 psi
- Integral 20 GPM flow restrictor
- Standard high visibility pull-rod activator
- DuraJade green, galvanized pipe

PRODUCT	DESCRIPTION
SE-227	Emergency shower

OPTIONS	DESCRIPTION
FPV	Freeze protection valve
SCSV	Self-closing valve with chain and ring
SPV	Scald protection valve
SSBV1	1 in. IPS stainless steel ball valve
SSH	Stainless steel shower head



## HORIZONTAL SHOWER

High-performing stainless steel emergency shower station with a stay-open ball valve to allow hands-free operation once activated.

- Horizontal supply
- 20 GPM at 30 psi
- Standard pull-rod activator
- Integral 20 GPM flow restrictor

PRODUCT	DESCRIPTION
SE-227-SS	Emergency shower

OPTIONS	DESCRIPTION
FPV	Freeze protection valve
SPV	Scald protection valve



# TRADITIONAL COMBINATION STATIONS

## COMBINATION STATIONS

- High-performance shower head
- Pull-rod activated shower
- 20 GPM at 30 psi shower
- DuraJade powder-coated finish
- Integral 20 GPM flow restrictor
- Eyewash: 3.2 GPM @ 30 psi or Eye/facewash: 4.5 GPM @ 30 psi

PRODUCT	DESCRIPTION
SE-690	SE-490 stainless steel bowl eye/facewash
SE-690-PVC	SE-495 plastic bowl eye/facewash, PVC piping
SE-693	SE-582 aerated stainless steel bowl eyewash
SE-695	SE-495 plastic bowl eye/facewash
SE-697	SE-580 aerated plastic bowl eyewash

OPTIONS	DESCRIPTION
FPV	Freeze protection valve
HFO	Hand and foot operation
HS	Addition of SE-920 hand-held drench hose
SCSV	Self-closing shower valve with chain and ring
SPR	Stainless steel pull rod
SPV	Scald protection valve
SSBV1	Substituting in a 1 inch IPS stainless steel ball valve
SSBV2	Substituting a ½ inch IPS stainless steel ball valve
SSH	Substitution of stainless steel shower head for standard



SE-697



## STAINLESS STEEL COMBINATION STATIONS

- High-performance shower head
- Pull-rod activated shower
- 20 GPM at 30 psi shower
- Eyewash: 3.2 GPM @ 30 psi or Eye/facewash: 4.5 GPM @ 30 psi
- Stainless steel stanchion

PRODUCT	DESCRIPTION
SE-625	SE-490 stainless steel eye/facewash
SE-626	SE-582 aerated stainless steel eye/facewash

OPTIONS	DESCRIPTION
FPV	Freeze protection valve
HFO	Hand and foot operation
HS	Addition of SE-920 hand-held drench hose
SCSV	Self-closing shower valve with chain and ring
SPR	Stainless steel pull rod
SPV	Scald protection valve



SE-625



## 6. PORTABLE EQUIPMENT

---

# CONQUER THE UNPREDICTABLE

Every worksite is different. Regardless if it's a construction site or golf course, the potential for chemical exposure is real. And an accident can happen in the blink of an eye.

For facilities that lack a reliable, convenient water source - it's vital to install equipment that functions independently from plumbing. Our portable eyewashes have been designed to be placed practically anywhere on your worksite.

Every item featured in this section has been engineered to harness gravity to deliver comforting yet powerful sprays to any affected area.



When stored in a 60-100°F location, all GravityFlo units will deliver tepid water.

# PORTABLE EYEWASHES

## GRAVITYFLO® PORTABLE EYEWASH

Features 20-gallon capacity tank with a pull-strap activation to provide hands-free operation for 15 continuous minutes. Includes a side fitting drench hose that provides additional protection and can be used for spot body flushing. Eyewash can be shelf- or wall-mounted.

- Easily refillable
- Pull-strap activation
- Tamper-resistant fill cap
- Flexible drench hose

OPTIONS	DESCRIPTION
SE-4300	Portable eyewash with drench hose
SE-4360	Cart for transportation with fluid collection bucket
SE-4380	SE-4300 with transportation cart and container
SE-4930	Freeze protected jacket for existing SE-4300s



## GRAVITYFLO® HEATED PORTABLE EYEWASH

Features a 20-gallon capacity tank with a freeze-protected jacket that keeps water temperature tepid in conditions as low as -10°F.

- Heated portable eyewash
- Water-resistant jacket
- LCD temperature read out
- Keeps water tepid down to temperatures of -10°F (-23°C)
- UL approved

OPTIONS	DESCRIPTION
SE-4330	Heated portable eyewash
SE-4930	Freeze protected jacket for existing SE-4300s



## PORTABLE EYEWASHES

### GRAVITYFLO® SE-4400

Features a 9-gallon capacity tank and a drop down activation to provide hands-free operation for 15 continuous minutes. Eyewash can be wall, table, shelf or pickup truck-mounted.

- Easily refillable
- Pull-down activation
- Tamper-resistant fill cap
- Wall bracket included



### GRAVITYFLO® SE-4000

Features a 21-gallon capacity tank and a drop-down activation to provide hands-free operation for 15 continuous minutes. Spray arms and valve are constructed of solid brass to provide exceptional durability.

- Easily refillable
- Pull-down activation
- Tamper-resistant fill cap



SE-4920 Drench hose for Gravityflo units

# PORTABLE EYEWASHES

## PRESSURIZED EYEWASH SE-590

Portable eyewash features dual spray heads and a 10-gallon capacity stainless steel tank that delivers water for 15 continuous minutes. Includes a side fitting drench hose.

- Stainless steel tank
- 10-gallon capacity
- Easily refillable
- Dual spray outlets
- Side fitting drench hose



## PRESSURIZED EYEWASH SE-591

Portable eyewash features dual spray heads and a 10-gallon capacity stainless steel tank that delivers water for 15 continuous minutes.

- Stainless steel tank
- 10-gallon capacity
- Easily refillable
- Dual spray outlets



## PRESSURIZED PERSONAL WASH SE-597

Portable personal wash features a single spray head and a 5-gallon capacity stainless steel tank.

- Stainless steel tank
- 5-gallon capacity
- Easily refillable
- Single spray outlet





## TEPID WATER, NO MATTER WHAT

Water temperature matters, even more so in an emergency. When not delivered at an appropriate temperature, water can cause some pretty severe damage. In fact, in the event of a chemical exposure, scalding-hot or freezing-cold water can actually intensify injuries.

Our Safe-T-Zone Thermostatic Mixing Valves have been engineered to regulate water temperature whenever an eyewash or emergency shower is activated. The result is equipment that performs to ASSE 1071 standards, delivering water at a safe, comfortable temperature.

We designed our Freeze & Scald Protection Valves to activate the second water temperature drops or rises past ANSI's required range. Which is ideal for emergency equipment installed in harsh environments.

# TEPID WATER SOLUTIONS

## THERMOSTATIC MIXING VALVE

Valve provides 41.1 GPM cold water bypass in the event of a hot water failure and includes a positive shut-off when the cold water supply is lost.

- Replaces Speakman's SE-350 Thermostatic Mixing Valve
- Supports multiple configurations of emergency stations
- Features 62.5 GPM flow capacity

PRODUCT	DESCRIPTION
STW-350	Thermostatic valve
OPTIONS	DESCRIPTION
STW-SC3	Flush-mounted cabinet



## THERMOSTATIC MIXING VALVE

Valve provides 24.9 GPM cold water bypass in the event of a hot water failure and includes a positive shut-off when the cold water supply is lost.

- Replaces Speakman's SE-362 Thermostatic Mixing Valve
- Supports multiple configurations of emergency stations
- Features 38.0 GPM flow capacity

PRODUCT	DESCRIPTION
STW-362	Thermostatic valve
OPTIONS	DESCRIPTION
STW-SC2	Flush-mounted cabinet



## THERMOSTATIC MIXING VALVE

Valve with 7 GPM flow capacity supports a single eye or facewash station. Provides a 5 GPM cold water bypass in case of element failure or loss of hot water. With interruption of the cold water supply, the control mechanism closes off the hot water port, stopping all flow.

- Designed for single eye or eye/facewash stations
- Features a 9.7 GPM flow capacity
- Equipped with an adjustable set point

PRODUCT	DESCRIPTION
STW-370	Thermostatic valve
OPTIONS	DESCRIPTION
STW-SC1	Flush-mounted cabinet



## FREEZE AND SCALD PROTECTION VALVES

Our valves are specifically engineered to regulate water when temperature drops or rises beyond a specific level. The FPV activates when water falls below 40°F to prevent the unit from freezing. The SPV activates when water rises above 95°F to prevent the unit from delivering scalding water.

- Solid brass or stainless steel construction

PRODUCT	DESCRIPTION
FPV	Freeze protection valve
FPV-SS	Stainless steel freeze protection valve
SPV	Scald protection valve
SPV-SS	Stainless steel scald protection valve




FPV



SPV

## A FIXTURE OF EPIC PROPORTIONS

The Emergency Tank Shower is unlike anything we've ever engineered. While not exactly portable, this fixture is designed for worksites that lack access to a potable water source. Its 528-gallon capacity tank features a substantial amount of water to function well beyond ANSI's required 15-minutes. Plus, the emergency tank shower features both a shower head and an eyewash to deliver complete and total relief.

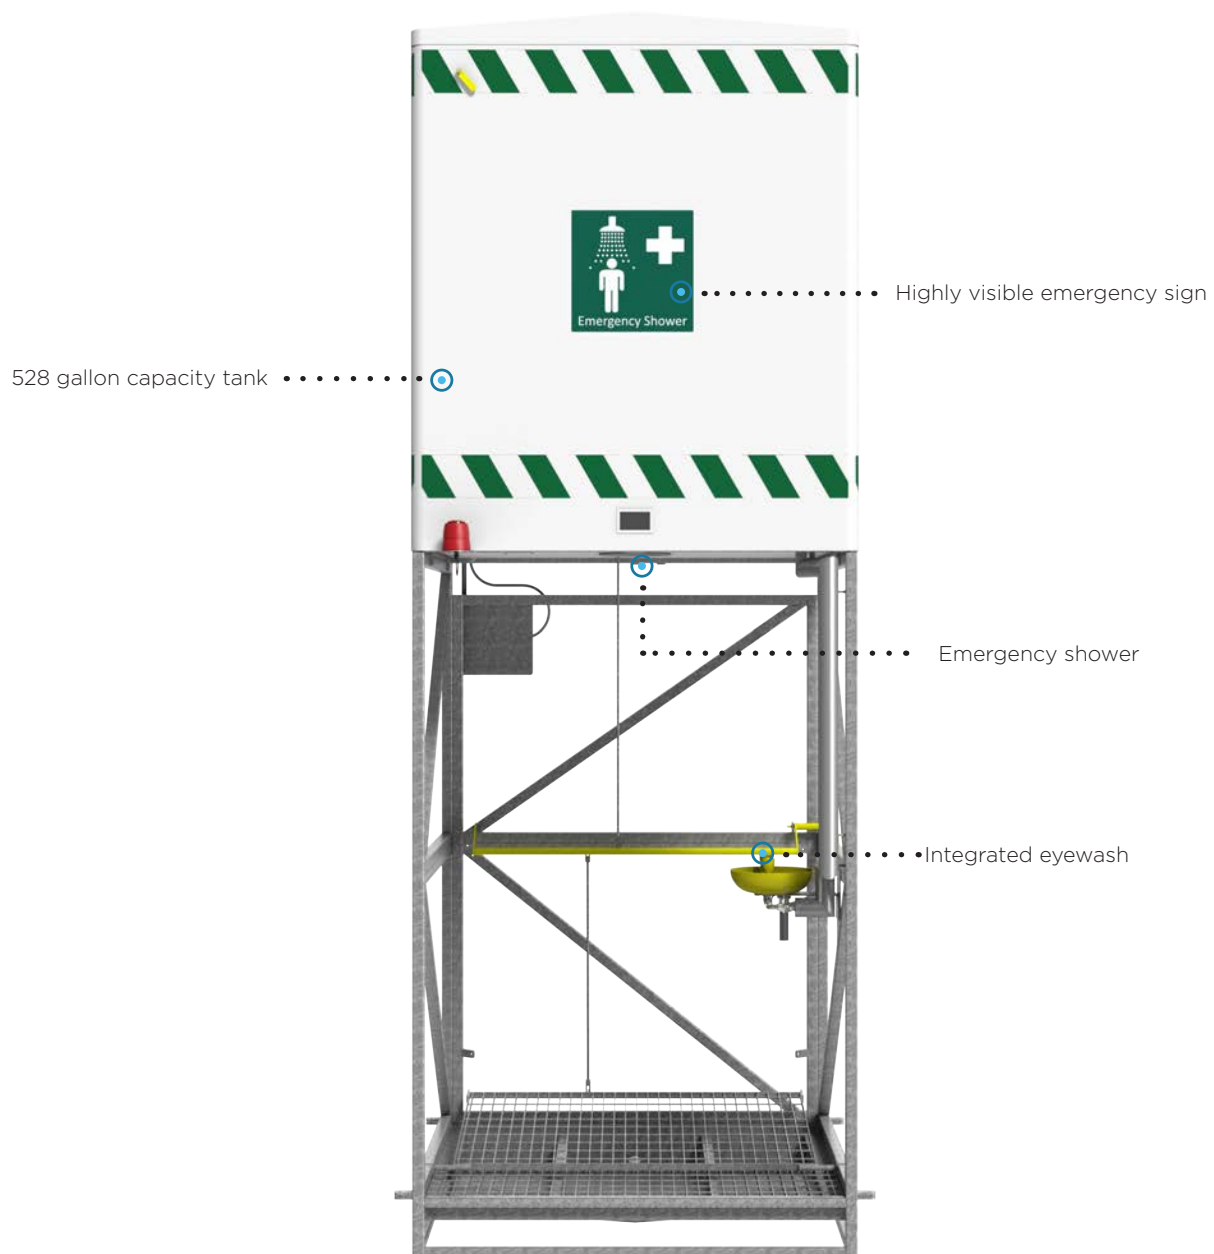

## EMERGENCY TANK SHOWER SE-8000

### TANK

- Galvanized steel structure
- 528 gallon (2000 liter) capacity plastic tank
- 3kw, 230VAC heater
- Constructed using UL Approved Components

### EYEWASH

- Dual spray heads
- Stainless steel push handle
- Certified with ANSI/ISEA Z358.1 by producing a minimum of .04 GPM for a minimum of 15 minutes

### SHOWER


- Certified with ANSI/ISEA Z358.1 by producing a minimum 20 GPM for a minimum of 15 minutes
- Disperses water evenly
- Drains water completely after use

OPTIONS	DESCRIPTION
TS-TREADLE	Treadle plate shower activator
TS-BUND	Water collection bund
TS-SCREENS	Three-sided privacy screens
TS-SSUPPORT	Stainless steel support frame
TS-GAUGE	Digital water level/Water temperature gauge
TS-ALARM	Alarm system for shower & Eyewash
TS-SSEYEWASH	Stainless Steel Eyewash



## WHEN THE ELEMENTS GET TOUGH, WE GET TOUGHER

When the temperature outside drops, it adversely affects the water flowing through your equipment. With our Heat Traced Combination Station, we designed insulated components that keep the unit functioning in weather conditions as low as -50°F.

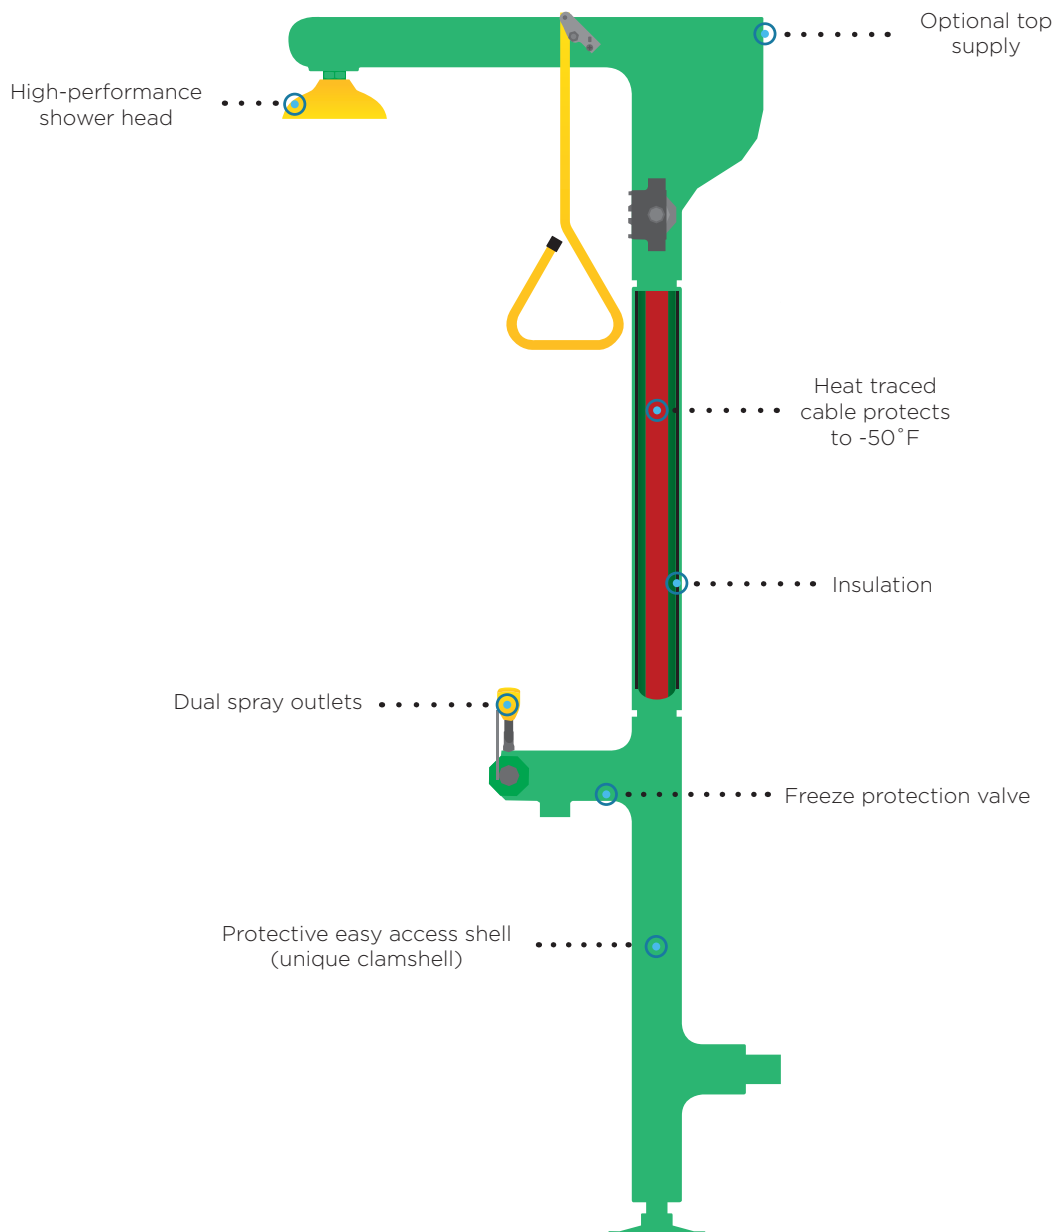

## HEAT TRACED COMBINATION

- Easy to access plastic shell
- Activated by powder-coated high visibility yellow, aluminum triangular pull rod
- High-performance yellow plastic shower head
- Freeze Valve activates automatically below 40°F and protects unit from freezing in case of power outage
- 1 in. NPTF chrome-plated brass stay-open ball valve
- 1 in. IPS galvanized steel pipe
- 1 in. NPT male, top or bottom supply inlet
- 20 GPM @ 30 psi shower
- (2) yellow plastic spray outlets with automatic flow control and flip-top dust caps
- ½ in. NPT, 3-way chrome-plated brass ball valve
- 4.5 GPM @ 30 psi eye/facewash
- Stainless steel push handle activated eye/facewash
- Self-regulating heating cable with braided metal shield
- Thermostat is preset, hermetically sealed single pole contact switch with temperature range of 60°F to 70°F
- Closed cell rubber foam insulation
- NEMA 4X watertight and dust-tight, suitable for indoor or outdoor locations junction box
- 120 vac, 60 cycle, single phase
- Electrical Classification Class 1 Division 2 GRP. B, C, D
- Ground Fault Protection: Installation will require minimum 30 mA GFFD



SE-7000 with options

PRODUCT	DESCRIPTION
SE-7000	Bottom supply
SE-7001	Top supply
SE-7000-PL	Bottom supply with pilot light
SE-7000-PL-CID2	Bottom supply with pilot light for class 1 division 2

OPTIONS	DESCRIPTION
DH	Drench hose
IWT	Immersion well thermometer
SPV-7000	Scald protection valve
UNI	1½ inch union inlet connection
VPL-CID2	Area light for class 1 division 2 areas - clear globe

Tepid Water Solutions pg. 33





# Safety First

Personal Protective  
Equipment

(Gloves, Goggles, & Apron)

Required



# THE PERFECT COMPANIONS

We take a great deal of pride in the designing the most reliable and intuitive emergency equipment available today. Our engineers obsess over the tiniest details to provide fixtures that will deliver a trusted, reliable performance.

We apply that same attention to detail to all of our emergency accessories. From our unique line of alarm systems to our vital testing kits - these items ensure our products will perform to their utmost potential.

## ALARMS & SIGNS

### ALARM SYSTEM

Alarm system features an electronic horn and flashing light. Alarm instantly activates when water flows through emergency equipment.

PRODUCT	DESCRIPTION
---------	-------------

AL-2	Flow switch, light, horn
------	--------------------------

AL-3	Flow switch, light, horn, silencing switch
------	--

OPTION	DESCRIPTION
--------	-------------

DPDT	Double pole double throw, flow switch for remote alarm activation
------	---



AL-2

### ALARM SYSTEM HAZARDOUS LOCATION

Alarm system features an electronic horn and rotating light. Alarm instantly activates when water flows through emergency equipment. Meets Class 1, Division 2 requirements.

PRODUCT	DESCRIPTION
---------	-------------

ALM2-C1D2	Flow switch, light, horn
-----------	--------------------------

ALM3-C1D2	Flow switch, light, horn, silencing switch
-----------	--

OPTION	DESCRIPTION
--------	-------------

DPDT	Double pole double throw, flow switch for remote alarm activation
------	---



ALM2-C1D2

### PRIVACY CURTAIN

This curtain provides privacy for removing contaminated clothing in the event of a chemical burn.

PRODUCT	DESCRIPTION
---------	-------------

SE-CURTAIN	Privacy Curtain for showers
------------	-----------------------------



## FLOW SWITCH FLW

Flow switch for remote activation. Unit is powered by a 120-volt AC power source.

PRODUCT	DESCRIPTION
FLW	Flow switch for remote alarm activation
FLW-DPDT	Double pole double throw, flow switch for remote alarm activation



FLW

## EMERGENCY SIGNS

Each of our emergency signs have been designed to easily indicate your given emergency equipment. Our signs are easy to install and are constructed of semi-rigid polyethylene.

PRODUCT	DESCRIPTION
SGN1	"Emergency Eyewash" sign
SGN2	"Safety shower" sign
SGN3	"Emergency shower and eyewash" sign




SGN3

## TEST KITS

Our test kits exist to allow routine testing of your emergency equipment. The SE-950 includes shower and eyewash tester. The SE-952 includes an eyewash test gauge.

PRODUCT	DESCRIPTION
SE-950	Shower and eyewash test kit
SE-952	Plastic eyewash test gauge

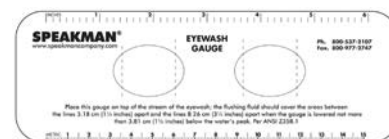



# BECOMING COMPLIANT


With OSHA penalties increasing, it's never been more important to comply with national codes and standards. According to OSHA, a single eye injury can cost employers over \$300,000 per employee. And historically, a lack of proper emergency equipment typically lands in OSHA's top 10 violations each year.

We get that staying up to date with these mandates can sometimes be complex and confusing. Which is why we've made it our mission to help make sense of this complicated world.

In the following pages, we invite you to explore checklists, standards, and services designed to ensure your facility complies with national regulations. We believe this section will serve as a great starting point to becoming ANSI/ISEA Z358.1 and OSHA 1910.151(c) compliant.

## THE ANATOMY OF A SPRAY

The idea behind our equipment has never wavered – to engineer products that perform flawlessly. But to achieve that, we not only need to live up to our own performance standards, but comply with ANSI/ISEA Z358.1 as well. Which is why every eyewash or shower we design undergoes extensive testing to deliver the most relieving experience possible. From the strength and comfort of every spray to the specific radius of water coverage, we believe it's our attention to detail that sets us apart from others.

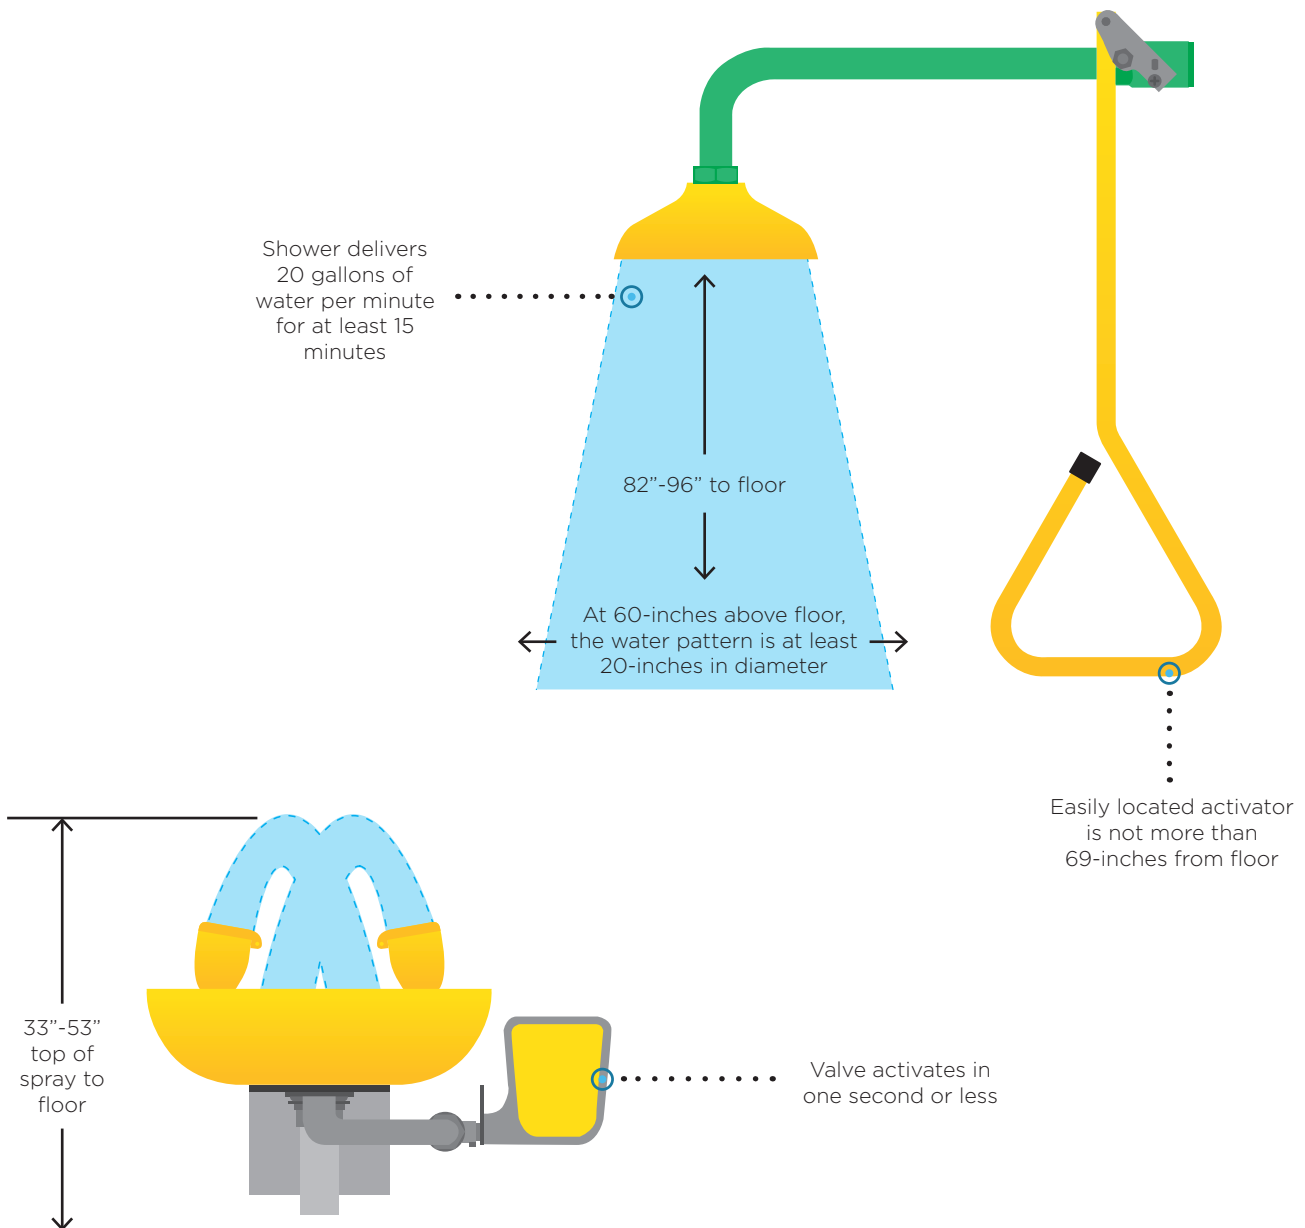

# REQUEST A FREE SURVEY

Our complimentary facility survey is designed to ensure your facility is completely up to date with ANSI/ISEA Z358.1 and OSHA 1910.151(c), and other national regulations. Upon request, a trained Speakman representative will visit your facility and conduct a comprehensive study using our revolutionary safety app. Immediately following the survey, you'll receive a detailed report that provides recommended solutions to become compliant.

## SURVEY BENEFITS



Protect employees working with hazardous materials.



Recommendations to comply with OSHA and ANSI / ISEA.



Reduce risk of OSHA violation.



Photograph of area and equipment evaluated.



Help existing equipment remain in good working condition.




Recommend products/budget to become compliant.



Evaluation of your facility's hazardous areas.



Documentation of what is required for compliance.

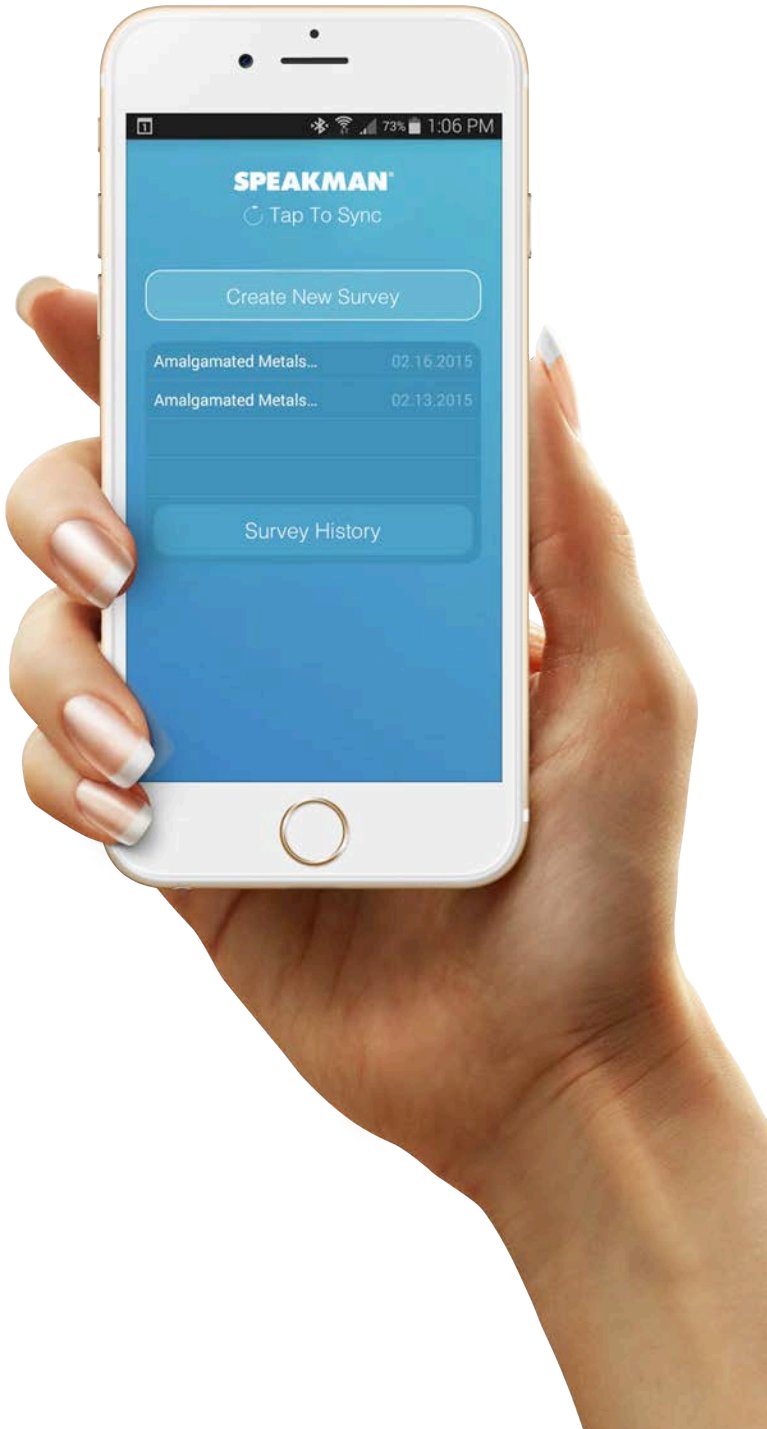

## COMPLIANCE STANDARDS

---



### 10 SECONDS TRAVEL TIME FROM A HAZARD

ANSI/ISEA Z358.1 requires that companies provide emergency showers and/or eyewashes within 10 seconds' travel time of a hazard. Look for signage indicating hazardous material use and make sure eyewashes and showers are within the prescribed distance.



### HAZARDOUS MATERIAL STORAGE

The storage, transfer and use of flammable liquids require showers and/or eyewashes as secondary protection. Look for containers used to handle or store these materials and make sure ANSI/ISEA Z358.1 compliant emergency equipment is within 10 seconds' travel distance.



### PERSONAL PROTECTIVE EQUIPMENT

Look for areas where workers are using personal protective equipment such as goggles and liquid proof gloves. These are found in areas where hazardous materials are being used and eyewashes and/or showers will be required as secondary protection.



### BATTERY CHARGING & MAINTENANCE

OSHA Directive Number STD 1-8.2. "This directive provides guidelines regarding eyewash and body flushing facilities required for immediate emergency use in electric storage battery charging and maintenance areas." Make sure emergency equipment is properly located near these hazards.



### HANDS-FREE OPERATION

ANSI/ISEA Z358.1 requires that shower valves be of simple operation, turn from off to on in one second or less, and provide hands-free operation once activated. Self-closing shower valves do not meet this standard and should be replaced.



### HAND-HELD BOTTLES

Personal eyewash equipment, such as squeeze bottles, do not meet the requirements of plumbed or self-contained eyewash equipment. Make sure units meeting ANSI/ISEA Z358.1 are within 10 seconds travel time from hazard.



### REPLACE INSUFFICIENT EQUIPMENT

Hand-held drench hoses do not meet the criteria of a plumbed or self-contained eyewash. If these are the only means of protection, they should be replaced or supplemented with equipment meeting the requirements of ANSI/ISEA Z358.1.

# COMPLIANCE STANDARDS

LOCATION: \_\_\_\_\_

CONTACT: \_\_\_\_\_

PHONE #: \_\_\_\_\_

ANSI/ISEA Z358.1 REQUIREMENTS	AREA #	1.	2.	3.	4.	5.
<b>GENERAL</b>		<b>YES / NO</b>	<b>YES / NO</b>	<b>YES / NO</b>	<b>YES / NO</b>	<b>YES / NO</b>
Emergency Showers & Eyewashes shall be located within 10 seconds' travel time of hazard.						
Equipment shall be tested weekly to verify proper operation and inspected annually for conformance to the ANSI/ISEA Z358.1 requirements.						
Flushing fluid shall be Tepid (60°-100°F) (Check with medical advisor for optimum temperature).						
Unit identified with highly visible sign.						
Unit shall operate hands-free once activated.						
<b>EYEWASHES &amp; EYE/FACEWASHES</b>		<b>YES / NO</b>	<b>YES / NO</b>	<b>YES / NO</b>	<b>YES / NO</b>	<b>YES / NO</b>
Minimum Flow for 15 minutes (Eyewash - .4 GPM Eye/Facwash 3.0 GPM).						
Nozzles protected from airborne contaminants.						
Provide flushing fluid to both eyes simultaneously at a velocity low enough to be non-injurious.						
Simple operation - "Off to on" in 1 second or less. Hands-free operation once activated.						
Height of spray 33" to 53" from standing surface.						
Nozzles 6" from wall or nearest obstruction.						
<b>DRENCH SHOWERS</b>		<b>YES / NO</b>	<b>YES / NO</b>	<b>YES / NO</b>	<b>YES / NO</b>	<b>YES / NO</b>
Minimum flow for 15 minutes - 20 GPM.						
Simple operation - "Off to on" in 1 second or less. Hands-free operation once activated.						
Height from standing surface 82" - 96".						
Spray pattern - 20" diameter @ 60" above standing surface.						
Center of spray located 16" from any obstruction.						
Product Recommendation.						

**OSHA 29 CFR 1910.151, SUBPART K, SECTION C**































































"Where the eyes or body of any person may be exposed to injurious corrosive materials, suitable facilities for quick, drenching or flushing of the eyes and body shall be provided within the work area for immediate emergency use."

# OPTIMUS® CROSS REFERENCE

OPTIMUS® SAFETY BOWL SERIES						
OPTIMUS		BOWL MATERIAL/ FRAME MATERIAL	TRADITIONAL SERIES EYEWASH	TRADITIONAL SERIES EYE/FACE WASH	SELECT SERIES EYEWASH	SELECT SERIES EYE/FACE WASH
	SE-1000	Plastic Wall Mount	SE-580/ SE-580-ADA	SE-495/ SE-495-ADA	SE-506	SE-401/ SE-401-ADA
	SE-1050	Stainless Steel Wall Mount	SE-582/ SE-582-ADA	SE-490/ SE-490-ADA	SE-505	SE-400/ SE-400-ADA
	SE-1100	Plastic Pedestal Mount Galvanized Steel	SE-583	SE-496	SE-544	SE-421
	SE-1150	Stainless Steel Pedestal Mount Galvanized Steel	SE-584	SE-491	SE-545	SE-420
	SE-1200	Plastic Combination Unit Galvanized Steel Stanchion	SE-697/ SE-697-ADA	SE-695/ SE-695-ADA	SE-615	SE-604/ SE-604-ADA
	SE-1250	Stainless Steel Combination Unit Galvanized Steel Stanchion	SE-693/ SE-693-ADA	SE-690/ SE-690-ADA	SE-616	SE-603/ SE-603-ADA
	SE-1255	Stainless Steel Combination Unit Stainless Steel Stanchion	SE-626 SE-628	SE-625 SE-627 SE-625-SS	SE-622 SE-624	SE-621 SE-623



# INDEX

Optimus® Eye & Facewash and Combination Units		
SE-1000	6	
SE-1050	6	
SE-1055	6	
OCV	6	
SE-1100	7	
SE-1150	7	
SE-1155	7	
SE-1200	7	
SE-1250	7	
SE-1255	7	
Eyesaver® Eyewash-faucets		
SEF-1850	11	
SEF-1800	11	
SEF-1000	11	
Eyesaver® SensorFlo®		
SEF-18100/-8	12	
SEF-18100-TMV /8-TMV	12	
SEF-18102/-8	12	
SEF-18107/-8	12	
SEF-18107-TMV /8-TMV	12	
SEF-18200/-8	12	
SEF-18200-TMV /8-TMV	12	
SEF-18202/-8	12	
SEF-18207/-8	12	
SEF-18207-TMV /8-TMV	12	
Eyesaver®/Service Sinks		
SEF-9000	13	
SEF-9200	13	
Lifesaver® Shower Head		
SE-810	15	
SE-820	15	
SE-830	15	
Laboratory Eyewashes		
SE-570	18	
SE-572	18	
SE-573	18	
SE-573-SD	18	
SE-577-SD	18	
SE-577-SD-ADA	18	
SE-575	19	
Laboratory Showers		
SE-236-PR	19	
SE-236	19	
SE-237	19	
SE-238	19	
Laboratory Eyewash & Showers		
SE-575-DP	20	
SE-575-DP-237	20	
SE-575-DP-238	20	
SE-575-SD-ADA	20	
Drench Hoses		
SE-927	20	
SE-925	21	
SE-925-TEW	21	
SE-920	21	
SE-921	21	
Traditional Eye & Facewashes		
SE-490	23	
SE-495	23	
SE-491	23	
SE-496	23	
SE-582	24	
SE-580	24	
SE-584	24	
SE-583	24	
Drench Showers		
SE-220	25	
SE-220-SS	25	
SE-227	26	
SE-227-SS	26	
Traditional Combination Stations		
SE-690	27	
SE-690-PVC	27	
SE-693	27	
SE-695	27	
SE-697	27	
SE-625	27	
SE-626	27	
GravityFlo® Eyewashes		
SE-4300	29	
SE-4330	29	
SE-4400	30	
SE-4000	30	
Pressurized Eyewashes		
SE-590	31	
SE-591	31	
SE-597	31	
Thermostatic Mixing Valves		
STW-350	33	
STW-362	33	
STW-370	33	
Temperature Protection Valves		
SPV	33	
FPV	33	
Tank Shower		
SE-8000	35	
Heat Traced Combinations		
SE-7000	37	
SE-7001	37	
SE-7000-PL	37	
SE-7000-PL-CID2	37	
Alarms, Signs & Testers		
AL-2	40	
AL-3	40	
ALM2-CID2	40	
AL3-CID2	40	
SE-CURTAIN	40	
FLW	41	
FLW-DPDT	41	
SGN1	41	
SGN2	41	
SGN3	41	
SE-950	41	
SE-952	41	

## APPLICATIONS



**GENERAL:** The prices shown herein are not intended to represent actual resale prices in any particular market. No obligation is assumed by Speakman Company ("Speakman") to sell anyone, at any price, the goods listed herein or in its catalog. The below Terms and Conditions and any conditions contained in Speakman-printed Acknowledgement of Order apply, regardless of any printed terms on a Buyer's order.

**PRICES, TAXES AND MISCELLANEOUS:** All prices listed herein supersede all prior prices and are subject to change without notice. All orders are subject to prices and price bulletins in effect at the time of shipment. In addition, all prices will be increased by any federal, state or local tax that applies. All orders must include pricing that matches Speakman's annual price sheet or other agreed-upon special pricing prior to being released for fulfillment. Custom products are available. Contact Speakman for assistance with pricing.

**PAYMENT TERMS:** Net cash 30 days. 1% cash discount\* for payment if received within 10 days of invoice date (1%/10 Days/Net 30 Days). \*Cash discount not available on payments with credit card.

**FREIGHT:** All sales are F.O.B. New Castle, Delaware. Full freight allowed on orders greater than \$2,000 when shipment is in the Continental United States. Terms for shipment outside the Continental United States are available on request. Routing of shipments shall be determined by Speakman.

**INTERNATIONAL FREIGHT TERMS:** All sales are Ex Works/Factory, (New Castle, DE) – Inco Terms 2014 unless otherwise stated. Speakman determines Prepaid Inland Freight as shipments to the 48 Continental U.S. states and applicable only to orders with a net total of \$2000.00 or more. Routing of Inland Freight for these shipments shall be determined by Speakman. Freight quotes for shipments outside the 48 Continental U.S. states are available upon request.

**DELIVERY:** Delivery to the initial carrier shall constitute delivery to the buyer. Buyer shall bear all risk of loss or damage in transit. All claims for damage in transit, shortage or non-delivery must be filed against the carrier by the buyer, and not Speakman. Speakman will not be responsible for the delay in shipment of goods, for any damages suffered thereof, when such delay is caused by circumstances beyond its control such as fire, flood, transportation delays, strike, material shortages, or other events of this nature.

**ACCEPTANCE, MODIFICATION AND CANCELLATION OF ORDERS:** Orders may be modified or cancelled only upon written agreement by Speakman. Orders for custom products cancelled are subject to billing for raw materials purchased and labor expended plus 25%. The need for continuing improvement in products and other factors require the making of changes from time to time in product design, material specifications and roughing in dimensions. All items are offered based on Speakman's current catalog descriptions. Speakman reserves the right to make changes of any kind to its products and their packaging without notice. If requested Speakman will provide to Buyer submittal and information concerning Speakman's products, but it is the Buyer's sole responsibility to determine whether the product satisfies the Buyers' specific requirements.

**CREDIT APPROVAL:** All orders are subject to credit approval by Speakman's Credit Department prior to acceptance of the order. Orders may be refused, delivery may be withheld or shipments stopped in transit on accepted orders without any liability on Speakman's part, if, in its sole opinion, the Buyer's ability to pay for the merchandise on the terms and conditions herein is in doubt.

#### WARRANTIES

**1 Year Limited Warranty:** Speakman bathroom accessories and commercial shower heads are warranted to be free of defects in material, workmanship, and for functionality on commercial shower heads for 1 year from date of installation. Speakman warrants to its purchases ("Buyer") that goods are sold free from defects in materials and workmanship and conform to Speakman's specifications at the time of manufacturing, provided the goods are properly installed and maintained. Buyer's sole and exclusive remedy for any goods that may prove to have had a non-conformance within the Warranty Period shall be, at Speakman's sole option, the repair or replacement of the non-conforming goods. This is Speakman's exclusive written warranty for bathroom accessories and commercial shower heads.

**5 Year Limited Warranty:** Speakman commercial and hospitality plumbing products are warranted to be free of defects in material and workmanship for 5 years from date of installation. ("Warranty Period"). Speakman warrants to its purchases only ("Buyer") that goods are sold free from defects in materials and workmanship and conform to Speakman's specifications at the time of manufacturing, provided the goods are properly installed and maintained. Buyer's sole and exclusive remedy for any goods that may prove to have had a non-conformance within the Warranty Period shall be, at Speakman's sole option, the repair or replacement of the non-conforming goods. This is Speakman's exclusive written warranty for commercial and hospitality plumbing products.

**3 Year Limited Warranty:** Speakman Safety products are warranted to be free of defects in material and workmanship for 3 years from date of installation. ("Warranty Period") Speakman warrants to its purchases ("Buyer") that goods are sold free from defects in materials and workmanship and conform to Speakman's specifications at the time of manufacturing, provided the goods are properly installed and maintained. Buyer's sole and exclusive remedy for any goods that may prove to have had a non-conformance within the Warranty Period shall be, at Speakman's sole option, the repair or replacement of the non-conforming goods. This is Speakman's exclusive written warranty for safety products.

**Limited Lifetime Warranty:** Speakman product finishes featured on shower heads, bathroom faucets, and bathroom accessories are warranted to be free of defects in material and workmanship for a limited lifetime after installation. Speakman warrants to its purchases only ("Buyer") that goods are sold free from defects in materials and workmanship and conform to Speakman's specifications at the time of manufacturing, provided the goods are properly installed and maintained. Buyer's sole and exclusive remedy for any goods that may prove to have had a non-conformance within the Warranty Period shall be, at Speakman's sole option, the repair or replacement of the non-conforming goods. This is Speakman's exclusive written warranty for product finishes on shower heads, bathroom faucets and bathroom accessories.

THE ABOVE WARRANTIES CONTAIN THE ONLY WARRANTY MADE BY SPEAKMAN. ANY AND ALL OTHER WARRANTIES OF ANY KIND WHATSOEVER WHETHER EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED AND DISCLAIMED. BUYER AGREES THAT SPEAKMAN SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, INDIRECT, SPECIAL, ECONOMIC OR PUNITIVE DAMAGES WHETHER THE THEORY BE BREACH OF THIS OR ANY OTHER WARRANTY, NEGLIGENCE, STRICT LIABILITY IN TORT OR BREACH OF CONTRACT.

**Returns:** Prior to returning material, a written Return Goods Authorization ("RGA") must be obtained from Speakman. No return goods will be accepted beyond 12 months from the date of invoice. Material should be shipped to Speakman, 400 Anchor Mill Road, New Castle, DE, 19720, attention: quality control. The RGA# should be marked on each shipping container. Material returned without a RGA# marked on the container will be refused. All transportation costs for returned goods must be paid by the buyer. Products returned for reasons other than defects or Speakman shipping errors are subject to the greater of a minimum 25% handling charge plus any additional expense incurred to recondition the goods for resale or \$20. All material shall be returned in its original unopened packaging. Custom products manufactured specifically to customers' specifications or items not listed in current price sheets are not returnable. Products returned as defective will be reviewed by Speakman for confirmation that the goods are not in conformance with its specifications. Following determination of non-conformance, Speakman will repair or replace the goods at its sole discretion. Buyer will bear all expense and risk of loss in connection with the return, provided that buyer will be reimbursed by Speakman for the cost of transportation for those goods Speakman determines are not in conformance. Product returned as defective but on inspection found to be in working order will be returned to the customer at their cost or a reduced credit will be issued based on Speakman's above return policy. Claims for shortages or incorrect filling of orders must be made within 60 days after receipt of goods by the buyer. Products shipped incorrectly by Speakman will be credited at invoice price plus any associated additional shipping costs.

**DISPUTES AND CHOICE OF LAW:** These Terms and Conditions of Sale shall constitute the entire agreement between Speakman and Buyer and shall be governed by and construed according to the laws of the State of Delaware, without giving effect to its rules governing choice of law. All claims, disputes, and controversies arising out of or relating to this agreement, or the breach thereof, shall, in lieu of court action, be submitted to arbitration in accordance with the Commercial Arbitration Rules of the American Arbitration Association ("AAA") then in effect, and any judgment upon the award rendered by the arbitrator(s) may be entered in any court having jurisdiction thereof. The site of the arbitration shall be Wilmington, Delaware, unless another site is mutually agreed between the parties. The parties agree that any party to the arbitration shall be entitled to discovery of the other party as provided by the Federal Rules of Civil Procedure; provided, however, that any such discovery shall be completed within four (4) months from the date the Demand for Arbitration is filed with the AAA.

**IMAP POLICY:** To learn about our imap policy - please visit [speakman.com](http://speakman.com)

223



**SPEAKMAN®**  
WWW.SPEAKMAN.COM



CERTIFIED TO ANSI/ISEA Z358.1



**SPEAKMAN®**

SPEAKMAN.COM | 800.537.2107



# EMER-011119